

## CLOQ Magical Music Box – User Manual

[HTTP://cloq.us](http://cloq.us)

Thank you for choosing CLOQ! This manual will help you understand the functions and operation of CLOQ Magical Music Box!



Figure 1. CLOQ Magical Music Box

### Powering CLOQ Magical Music Box

CLOQ is powered by USB-C. You can connect CLOQ using the included wall adapter, a computer, a USB battery pack or and other USB power source. Plug the USB-C cable into the USB-C receptacle on the back of the music box body and then plug in the wall adapter or other power source. When powered on, the music box will start up and play a random track from the music stored on its memory card.

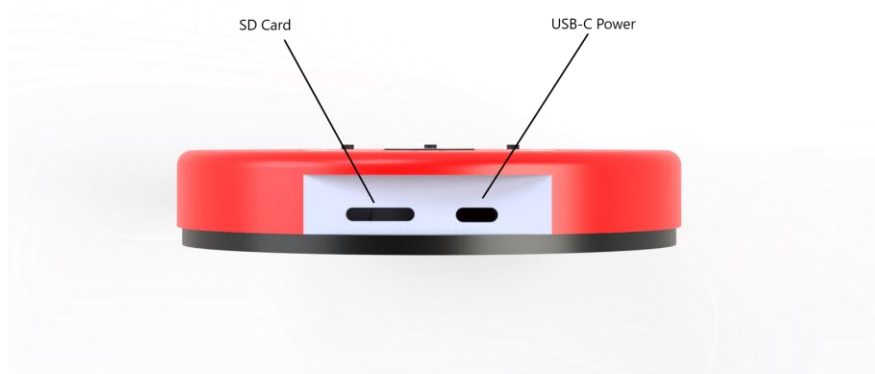


Figure 2. Back panel

## Buttons

Cloq Magical Music Box has three buttons: Prev/Vol-, Play/Pause, and Next/Vol+. The button functions are determined by how the button is pressed: click, double-click, or long press (hold down for 3+ seconds). The functions are summarized in Table 1.

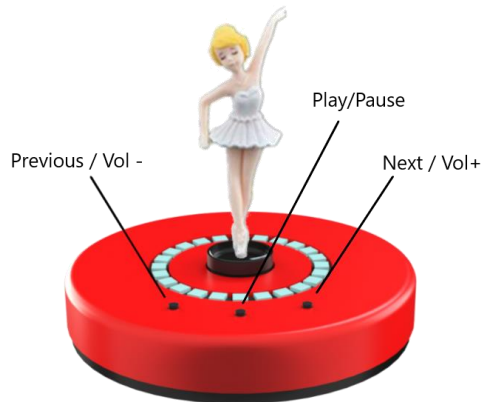


Figure 3. buttons

	Click	Double-Click	Long Press
<b>Prev/ Vol -</b>	Previous track	--	Volume down
<b>Play/Pause</b>	Play or Pause	Stop/start ballerina spin	Turn music box off/on
<b>Next/Vol +</b>	Next Track	--	Volume up

Table 1. Button functions

## SD Card

The memory card is accessible from the back panel (see Figure 2.) To add music, remove the card and connect it to your computer using a card slot or USB card adapter. To remove the card, use your nail or other thin object to press the card in slightly. The spring-loaded card will then pop out. Take note of the orientation of the card – you must reinsert it in the same orientation. You can add (or delete) any number of mp3 tracks, however, the tracks must follow a specific naming convention: 0001.mp3, 0002.mp3, 0003.mp3, 0004.mp3, etc. In other words, the track names must be consecutive four-digit numbers xxxx.mp3.